




SETELX

1380001122







Directions for use Návod k použití Návod k použitiu Bedienungsanleitung Instrucija montažu opravy Használati utasítás Lietošanas pamācība Naudojimosi instrukcija Kasutamisi juhend Instructiuni de folosire Uputstvo za upotrebu Navodilo za uporabo Инструкція по експлуатації Угьтване Manual de instrucciones Gebruiksaanwijzing Mode d'emploi Istruzioni per l'uso Monteringsveledning Modo de emprego NEAKATEY YN

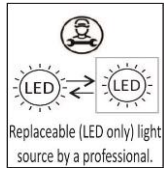


220-240V
50-60Hz




	A mm	B mm	B1 mm	B2 mm	B3 mm	C mm	C1 mm	C2 mm	X mm	R mm
TELX S	605	38	61	59	50	46	84	57	500	545
TELX XM	750								650	690
TELX M	1186								900	1095
TELX L	1486								1200	1395
TELX LNZ	1486	46				61			1260	1294

 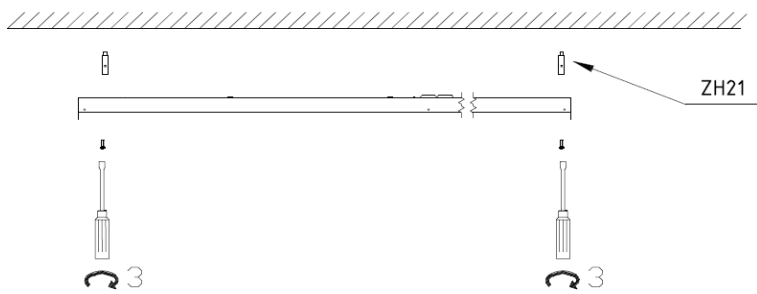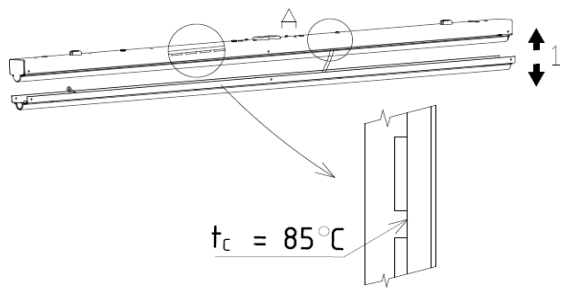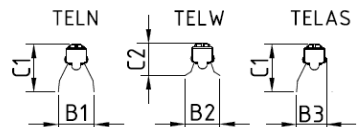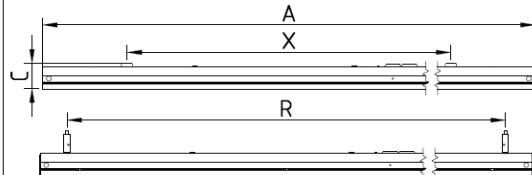 

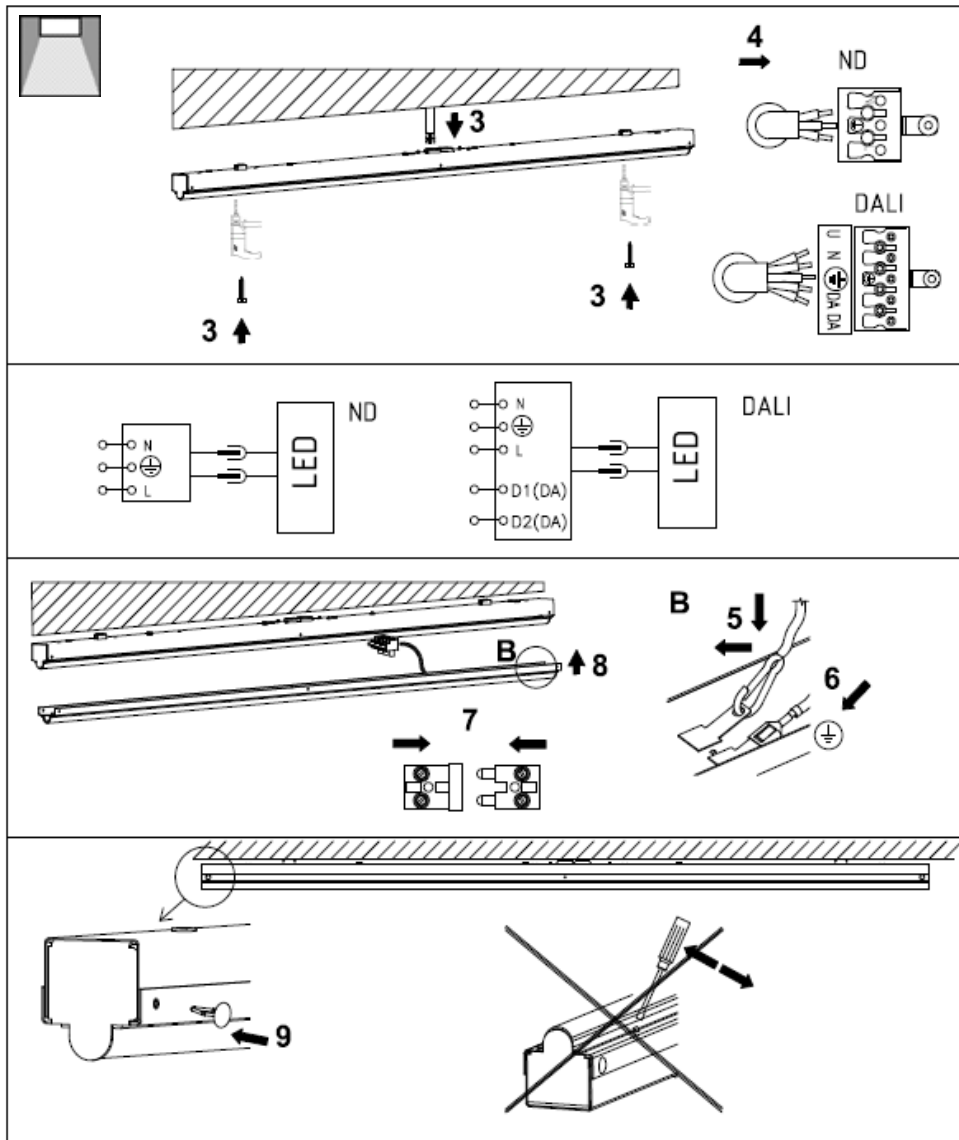

Výměna ovládací jednotky / Control gear replacement

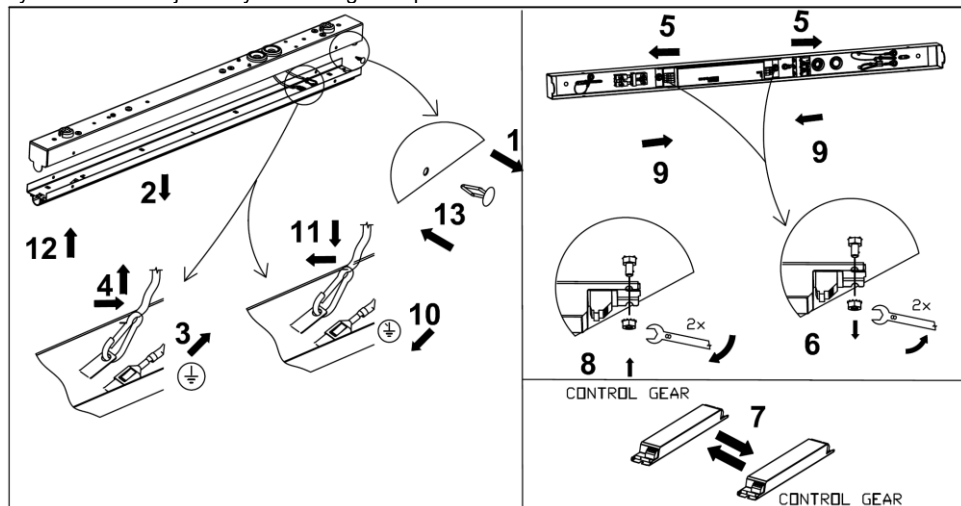

EN: Attention! The lighting unit may only be assembled by a skilled firm or by person with electrotechnical qualification. Always switch-off the powersupply before carrying out any maintenance. The light source in this luminaire may be replaced only by the manufakturer or Tts contractual service technician or a similarly qualified person! The manufacturer shall not be liable for any modifications of the product of incorrec instalation of the product. The warranty period of this product is 24 months from the purchase date. The warranty doesn't cover damage caused by improper handling.

FRA: Attention! les luminaires doivent être poses par des sociétés spécialisees ou par des personnes compétentes ayant le diplôme d'electrotechnicien.