
# SELEXTRA-N-LED, MULTISELEXTRA-N-LED, SELEXTRA-N-LED-Em Technical conditions of the lighting fixture installation ENG

## FTZÚ 16 ATEX 0102X

### 🐵 II 3G Ex nR IIC T6 Gc II 3D Ex tc IIIC T80°C Dc IP66, instulation class I

The explosion proof light fitting meet the standards according to the EU instuctions 2014/34/EU. They can be used in areas with danger of explosion according to the following chart:

| Area with danger of explosive                        | Marking<br>of exterior | Classification of area |                                      |  |
|--|------------------------|------------------------|--------------------------------------|--|
|  | ambient                | Marking                | Complusory regulation                |  |
| Danger of explosion of<br>inflammable dust           | BE3N1                  | ZONE 22                | ČSN EN 60079-14<br>ČSN EN 60079-10-2 |  |
| Danger of explosion of<br>inflammable gas and vapors | BE3N2                  | ZONE 2                 | ČSN EN 60079-14<br>ČSN EN 60079-10-1 |  |

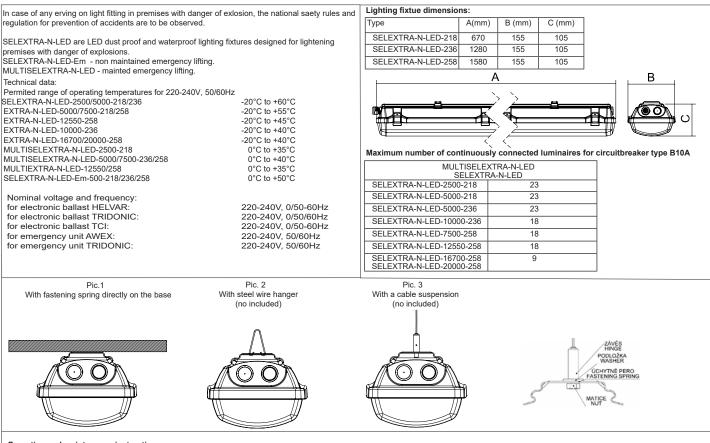

A.

Operation and maintenance instructions:

The light fittings, which operate in areas of above mentioned premises, are under the requirements resulting from compulsory regulations of valid EN:

The light fitting must not be open, if the terminal block is alive
 Free outlets for supply cable must be sealed with plugs M20.

Any change or replacements of components of the light fittings, which can influence the protection before the danger of explosion, are forbidden.

- The repair of the light fittings can be done only by person with relevant qualification, only with original spare parts and in compliance with the latest regulations.

The fixtures are certified by FTZÚ, AO 210, Ostrava - Radvanice:

1) Certificate of type FTZÚ 16 ATEX 0102X from date 25.10.2016 2) Supplement no.1 to certificate FTZÚ 16 ATEX 0102X date of issue 25.7.2017

3) Supplement no.2 to certificate FTZÚ 16 ATEX 0102X date of issue 29.10.2021

#### Mountig:

1. Remove reflector from the luminaire

2. Remove the bag with equipment.

3. The side opening in the body plant the cable gland (which is included in the luminaire equipment), and on the other side of her body screw the nut. Cable gland nut to the body, tighten torque 2,7Nm

4. To the hinges on the body insert clips from equipment luminaire.

5. Fasten the lighting fixture on the base:

a) With fastening spring directly on the base pic. 1
b) With steel wire hanger (no included) pic. 2
c) With a cable suspension (no included) pic. 3.

#### Note: another method of fastening is not allowed!

6. Pull the power cable through the cable gland. Tighten bushings to a state of partial deformation of the rubber sealing washers, tightening torque 2,5Nm.Supply cable must have an outer diameter in the range (see. Table sealing areas), which is a necessary condition for correct function of cable gland. Hole for power cable in the housing, which is not used cable gland (which is contained in the equipment luminaires), seal blanking plug. In the luminaire is not allowed to use respiratory protective plugs and cable glands breathing

7.Connect the suppling cable to the free part of incoming terminal strip as follows:

|   |      |            | SELEXTRA-N-LED-Em |                   | MULTISELEXTRA-N-LED |                    | MULTISELEXTRA-N-LED      |  | N-LED-Em MULTISELEXTRA-N-LED |  | 8-9 mm |
|---|------|------------|-------------------|-------------------|---------------------|--------------------|--------------------------|--|------------------------------|--|--------|
| L | -    | phase      | L1                | cond. of charging | L1                  | cond. of charging  |                          |  |                              |  |        |
|   |      | conductor  |                   | phase             |                     | phase              |                          |  |                              |  |        |
| - | -N-L | .ED -      | -                 | -                 | L2                  | cond. of switching |                          |  |                              |  |        |
|   |      |            |                   |                   |                     | phase              | ↓                        |  |                              |  |        |
| N | 1    | neutral    | N                 | neutral           | N                   | neutral            |                          |  |                              |  |        |
|   |      | conductor  |                   | conductor         |                     | conductor          | 0,5- 2,5 mm <sup>2</sup> |  |                              |  |        |
| Œ |      | protective | Ð                 | protective        | Ð                   | protective         |                          |  |                              |  |        |
|   |      | conductor  | l i               | conductor         |                     | conductor          |                          |  |                              |  |        |

\* To each pole of terminal block can be connected two conductors in cut 0, 75 - 2, 5 mm2. In case of through-wiring connection it is necessary to use accessories for such connection! In case that the label with the description of connection is glued on the reflector of luminaire, you must do connection according this description.

8. Fasten reflector back to plastic handles.

9. Insert the stainless clips (which are included in the equipment) into the prepared plugs on body.

10. Attach the glass cover on the fixture:

attach the optical cover that all round landed on a seal which is disposed in the fixture
 Optical cover secure by the stainless steel clips, secure each clip with the screw included with the luminaire.

#### Test of operation:

For correct operation it is necessary to observe enclosed instruction about testing of emergency fixtures. Switch the luminaire off the mains voltage. The emergency LED module must light. The green LED in the reflector is off. Should the emergency lamp be extinguished within the test period though the battery is fully charged, the latter will have to be replaced by a new battery set.

### Warning: The full battery capacity will be available after approximately three charging/discharging cycles.

#### Battery change:

"Replace the battery in a non-explosive environment"

Battery change is necessary when the fixture doesn't observe the conditions of rated operation period durability. In explosive area it is prohibited to disconnect battery for emergency unit. It is allowed to disconnect the fixture from supply voltage and take remove reflector from the fixture.

#### 11. Disconnect the fixture from supply voltage.

12. Remove reflector from the housing.

#### 13. Disconnect cable from terminal block.

14. Disconnect battery from emergency unit in non-explosive area as follows ,-"black conductor and ,+"red conductor.

15. Unbolt the nut of battery holder

16. Remove the old battery.

- 17. Screw the new battery (mark the date of operation start).
- 18. Connect conductors to battery as follows "+"red conductor and "-"black conductor.

19. Connect the fixture to supply voltage.

20. Equip with reflector and cover. Fix it with the clips.

WARNING: The battery in the fixture can be changed for the same type or the same parameters only!!!

#### Table: List of cable glands:

| Cable glands                   | Diameter of the cable for cable glands |  |
|--------------------------------|--|--|
|                                | M25x1,5                                |  |
| OBO V-TEC Ex                   | Ø 7 mm - 12 mm                         |  |
| CEAG CHG 960 92 P              | Ø 5,5 mm - 13 mm                       |  |
| WISKA ESKE/1 (S)(-L)(-*)(-RDE) | Ø 7 mm - 13 mm                         |  |
| ELFIT UNI                      | Ø 7 mm - 12 mm                         |  |
| BIMED LYRA (EURO-TOP)          | Ø 7 mm - 12 mm                         |  |

In case of any interventions on fixture lighting in premises with danger of explosion, the national safety rules and regulation for prevention od accidents are to be observed. Sv(tidla EXTRA-N-LED are LED dust proof and waterproof lighting fixtures designed for lightening premises with danger of explosions.

The light source and gasket in this lighting fixture can be replaced only producer or its contractual service technique or a similarly qualified person. When installing lighting fixture, observe the ESD safety using appropriate tools! When the mounting instructions are not observed, the producer can't be responsible for incidental damages incurred.

The light source and gasket in this lighting fixture can be replaced only producer or its contractual service technique or a similarly qualified person. Any modification or replacement of components on the luminaire that affects the protection against dangerous explosions is prohibited. Repairs to luminaires may only be carried out by a suitably qualified person and only with original spare parts.



ATTENTION!!! For wall installation of lighting fixture must be LED driver positoned facing downwards WARNING – potential danger of electrostatic charging. WARNING – the lighting fixture must be installed in the position, which does not allow the touch of persons and parts of the fixture. WARNING – the lighting for fixed installation. WARNING – the fixture should be cleaned with damp duster only. It is necessary to keep periodic cleaning intervals of lighting fixture WARNING – do not open under voltage. WARNING – replace protective cover

Producer included in recycling system provided by EKO-KOM Company (EK-F06070058).